

Symbol Scorecard – Capital Cost Estimation

TBWS, 2nd Ed., Chapter 5

Key Equations

$$C_{BM}^0 = F_{BM}^0 \cdot C_P^0$$

Page 159

$$C_{BM} = F_{BM} \cdot C_P^0 \quad (5.6)$$

$$C_P = C_P^0 \cdot F_P \cdot F_M \quad (5.11)$$

$$F_{BM} \neq F_{BM}^0 \cdot F_P \cdot F_M$$

Page 168

$$F_{BM} = B_1 + B_2 \cdot F_P \cdot F_M \quad (\text{A.4})$$

$$C_{TM} = 1.18 \sum_{i=1}^m C_{BM,i} \quad (5.15)$$

$$C_{GR} = C_{TM} + 0.50 \sum_{i=1}^m C_{BM,i}^0 \quad (5.16)$$

Symbol	Cost	Comment
C_P^0	Purchase cost of equipment - at manufacturer's site - at base conditions	Depends on equipment type and size. Displayed by CAPCOST [©]
C_P	Purchase cost of equipment - at manufacturer's site - at process conditions	Depends on equipment type, size, pressure, and MOC. Not displayed by CAPCOST [©]
C_{BM}^0	Bare module cost - at base conditions	Includes direct + indirect equipment costs. Obtainable from CAPCOST
C_{BM}	Bare module cost - at process conditions	Includes direct + indirect equipment costs. Displayed in CAPCOST
C_{TM}	Total module cost This is <i>FCI</i> for small projects.	Includes direct + indirect + contingency & fee costs. Displayed in CAPCOST in Utilities sheet.
C_{GR}	Grass roots cost This is <i>FCI</i> for large projects.	Includes direct + indirect + contingency & fee + auxiliary facilities costs. Displayed in CAPCOST in Utilities sheet.

F_P	Pressure factor	Depends on equipment type and process pressure. Not displayed by CAPCOST [©]
F_M	Material factor.	Depends on equipment type and material. Not displayed by CAPCOST [©]
F_{BM}^0	Bare module cost factor - at base conditions	Includes direct + indirect equipment costs. Obtainable from CAPCOST
F_{BM}	Bare module cost factor - at process conditions	Includes direct + indirect equipment costs Obtainable in CAPCOST
B_1	Parameter to calculate F_{BM} for heat exchangers, pumps, towers, and vessels.	Depends on equipment type. Displayed in CAPCOST in Equipment Cost Data sheet.
B_2	Parameter to calculate F_{BM} for heat exchangers, pumps, towers, and vessels.	Depends on equipment type. Displayed in CAPCOST in Equipment Cost Data sheet.